

## How do I reset a Risycor logger?

It may be desirable, for whatever reason, to reset the logger memory. You can do this easily via the Resus PC Dashboard.

### What do I have to do?

1. Connect your logger to the computer with a mini-USB / USB cable.
2. Open the Resus PC Dashboard (download via [www.resus.eu](http://www.resus.eu))
3. Navigate to 'View sensor info'
4. Click on 'Admin functions'
5. Click on 'Erase all measurements' and make a backup if desired
6. The measurements are then deleted. After the measurements have been deleted, the logger will be restarted.

The screenshot shows the Resus Dashboard Technical interface. The top navigation bar includes the Resus logo, a 'Logger connected' status, and a 'Select language: EN' dropdown. The main content area is titled 'Resus Dashboard > View sensor info' and contains a warning: 'WARNING: this function clears the memory permanently'. Below the warning are three buttons: 'Erase all measurements', 'Backup logger memory', and 'Restore logger memory'. The 'Erase all measurements' button is circled in red and labeled with a red '5'. The 'Admin functions' tab in the navigation bar is circled in red and labeled with a red '4'. The 'View sensor info' link in the left sidebar is circled in red and labeled with a red '3'.