

Where do I find the specification texts?



This document shows the generic specification text for corrosion monitoring. You can find the product specific specification texts in the product data sheets.



Generic specification text for corrosion monitoring

Risycor corrosion monitor with alarm function. Mounted perpendicular to the pipe with the threaded connector **X-fix**, which places the metal coupon at the tip of the probe in the water flow. The oxidation of this coupon is representative of the uniform corrosion within the system. The logger records the corrosion rate against time and warns of inadmissible values or a defect. The potential free contact can be used to send an alarm signal e.g. to the BMS. The memory can be read out with a computer.

Product specific specification texts

1. Surf to www.resus.eu
2. Navigate to products
3. Click on the required product
4. Click in the bottom right corner 'Downloads' ' Technical Data Sheet
5. The data sheet will open as PDF
6. You find the specification text at the bottom of the first page
7. If you want an anonymous specification text just delete the cred text.

