


How do I set the corrosion alarm threshold?

This can be set via the Resus PC Dashboard. Caution: A higher threshold provides less security.

What do I have to do?

1. Connect the logger to the computer using a mini-USB to USB cable
2. Open the Resus PC Dashboard (downloadable from www.resus.eu)
3. Click on 'View sensor info'
4. Navigate to 'Algorithm Parameters'
5. Click on 'Edit'
6. Enter the desired value
7. Click on 'Save'
8. The change has been saved
9. Under 'Corrosion Rate History' you can see the history of the set threshold values

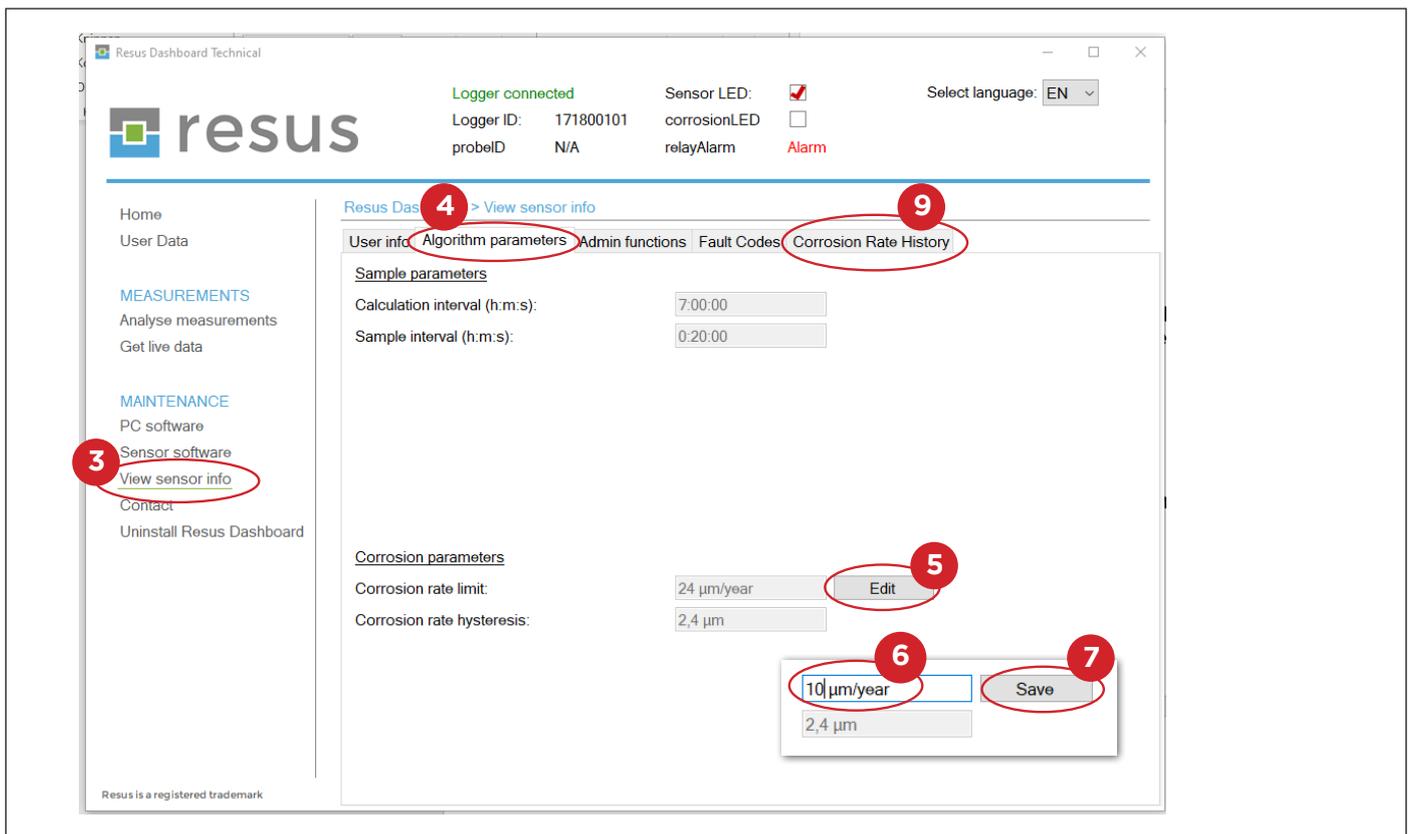

Updated: 14/07/2022