

## How do I update a Risycor via the Resus PC Dashboard?

Connect the Risycor to your computer using a data cable and follow the steps below.


### First follow these steps (your computer must have access to the internet)

1. Open the Resus PC Dashboard (available for download from [www.resus.eu](http://www.resus.eu)).
2. Make sure you have the latest version of the Resus PC Dashboard.  
(see TT03: is my Resus PC Dashboard the latest version?)
3. Connect the logger to your computer using a data cable  
(Tip: the logger can be removed from the probe during the upgrade.)
4. Navigate to **Sensor software**.
5. Click **Check for updates**.
6. If a new firmware version is available, the message “New version available” will appear.
7. Click **Start download**. The latest firmware for the connected Risycor will be downloaded from the internet to your Resus PC Dashboard. Wait until the download is complete.


### Then follow these steps to perform the firmware update on your Risycor

8. Now click on **Start update** to start the firmware update. Do not worry if the update takes some time or if it restarts during the process. The firmware update may take more than 10 minutes.
9. You will receive a notification when the firmware update is complete.
10. Any additional Risycor units can now be updated without requiring internet access on your computer.


Check for updates

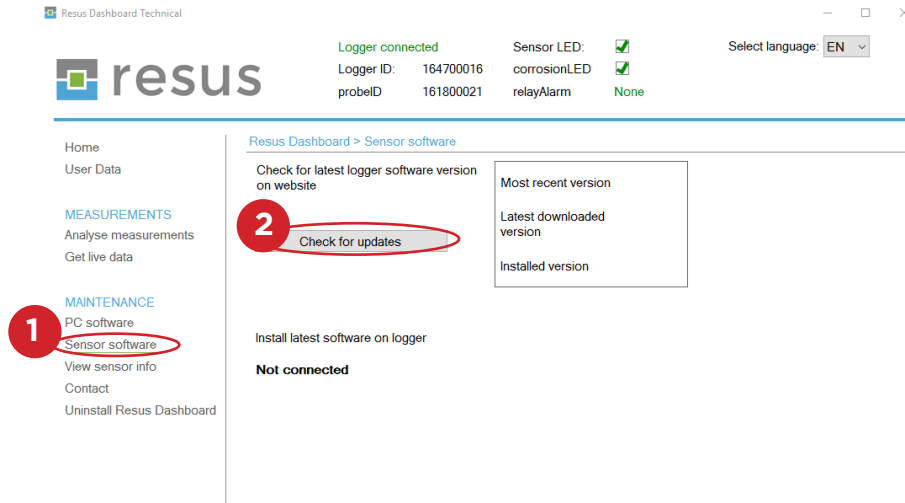

Download update

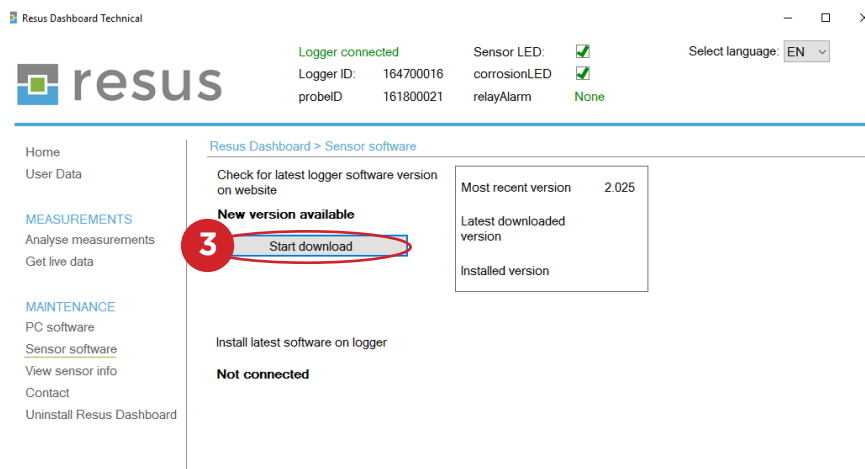

Start update

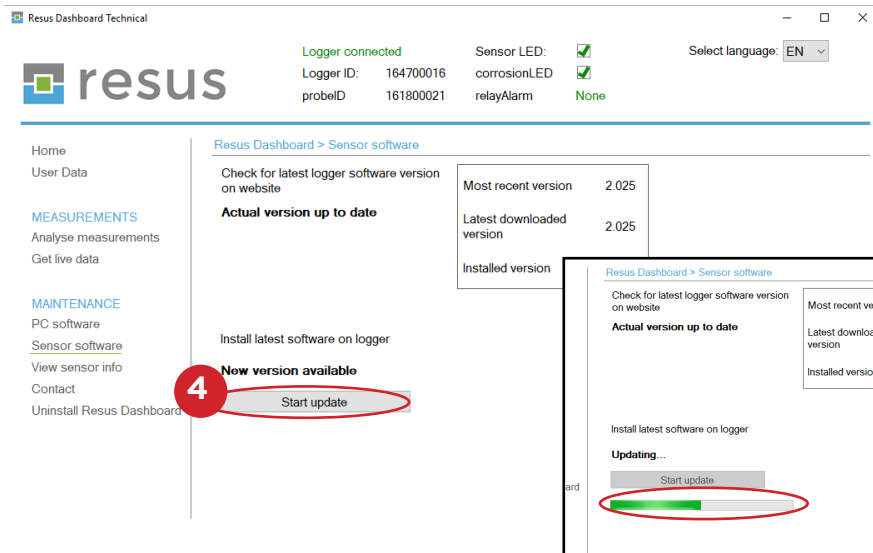

Update can take >10 min

Update completed

